

# TASKI AERO 8 FLEXX WALLCHART

## Preparation





	<p>1 Remove battery from charger and switch it off</p>		<p>2 Insert battery into battery compartment</p>		<p>3 Insert dust bag</p>		<p>4a Assembly HEPA filter</p>
--	--	---	--	---	--------------------------	---	--------------------------------

					<p>5 Select nozzle type depending on surface</p>		<p>6 Adjust tube length</p>
--	--	---	--	---	--	---	-----------------------------

## Operation

	<p>7 Switch on battery button</p>		<p>8 Select boost/eco mode</p>		<p>9 Turn off battery button</p>		<p>10 Release blockade (click) to remove battery</p>
---	-----------------------------------	--	--------------------------------	--	----------------------------------	--	--

## Maintenance

	<p>11 Place the battery on the charger. Orange = charging. Green = fully charged. Red = fault</p>		<p>12 Remove upper part of machine body</p>		<p>13 Remove &amp; empty dust bag</p>		<p>14 Wipe machine clean with a damp cloth</p>
--	---	---	---	---	---------------------------------------	---	--

	<p>15 2 storage positions</p>
--	-------------------------------

## ATTENTION!

Do not use the machine before you have read and understood the operating instructions!

Questions: 1-800-558-2332

